

# MOULDING

Installation manual for foam polyurethane  
decorative elements

TOOLS AND MATERIALS



Spring tape measure



Lead pencil



Filament



Anglemeter




Miter saw



Hammer



Adhesive applicator gun

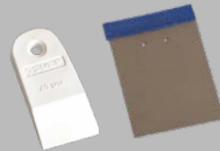

Rubber putty knife.  
Stripping knife




Protective gloves



Fine grain abrasive paper



Cotton waste (Cloth)

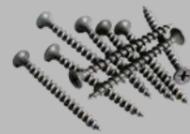

Self-tapping screw



Acetone.  
White spirit



Fine grain  
water-soluble filler

ADHESIVE



MULTIPURPOSE ADHESIVE  
290 ml



ADHESIVE FOR BONDING JOINTS  
60 ml

The following information is relevant for Evroplast adhesives. If you use other adhesives, follow manuals on it's package.

**Work performance conditions:** the temperature while performing the works and the next 24 hours must be at least + 8°C. Indoor relative air humidity must be 40%. It is required to keep the product in the room for 24 hours at least.

**Requirements to the surface:** prepared surface must be dry, degreased, cleaned from dust. Weak mineral substrates should be pre-strengthened by suitable primer.



1 Make marks from the floor to the upper edge of the product.



2 Using chalkline connect the marks along the perimeter of the room.



3 Using angle finder measure the angle of the corner of the room.



4 Set the angle on the trimming saw, make a cut on the product. In rooms with 90° corners it is possible to use a mitre box and a hand saw.



5 Apply «Evroplast Mounting» adhesive on the mounting surface or «Evroplast Multipurpose» adhesive along the length of the product. The thickness of the applied layer of adhesive shall be 3-5 mm.



6 Affix the product to the place of installation according to the marking on the wall. Press the product along the whole length so that adhesive exudes from under the whole junction surface.



7 Immediately after attaching remove excess adhesive using putty knife.



8 If necessary wipe the area of junction between the product and the wall with a cloth wetted with water if using «Evroplast Mounting» adhesive; with acetone if using «Evroplast Multipurpose» adhesive.



9  
If using «Evroplast Mounting» adhesive it is necessary to hold it with finishing nails hammered under the product to prevent the product from sliding. The nails are removed after 24 hours.



10  
If using «Evroplast Multipurpose» adhesive additional fixation with nails is not required.



13  
Wipe the end surfaces of abutting products with wet cloth to remove dust and other contaminants.



14  
Apply «Evroplast for bonding joints» adhesive on the end surface of already mounted product.



11  
For products of more than 100 mm height, additional fixation with self-tapping screws at a spacing of about 600 mm is required.



12  
Cut the next product. Check the joining of the pattern and the profile of products, if necessary redo the cut.



15  
Apply «Evroplast Mounting» or «Evroplast Multipurpose» adhesive on the mounting surface of the next product.



16  
Press the product to the wall so that adhesive exudes from under the whole surface of junction. While moving the product along the wall, push it to the adjacent product so that adhesive exudes from the joint.



17 Immediately after attaching, remove excess adhesive using putty knife.



18 Wipe the joint with cloth wetted with acetone.



21 Fill the sanded joints with fine-grained, water-soluble filler for interior works, if necessary repeat "Step 20" until you get a flat surface.



22 Fill the joint of the product to the wall with adhesive in those areas where no adhesive exuded.



19 Continue mounting the next product



20 After 3 hours sand the joints with fine sandpaper.



23 Wipe the excess adhesive with a cloth wetted with water if using «Evroplast Mounting» adhesive; with acetone if using «Evroplast Multipurpose» adhesive.



24 Paint the products, following directions from the paint manufacturer, starting from the corner of the room.

[gauidedecor.eu](http://gauidedecor.eu)